


Method of usage


- 1 Unfold the unit as shown on the right.

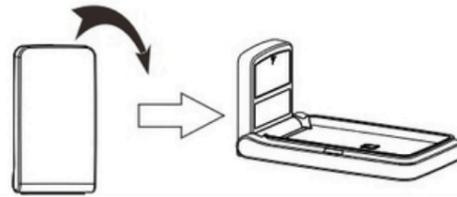

- 2 Take a liner from paper holder and lay it on the table.
If a pad is not supplied with the unit, the size is 45x35cm

- 3 Lay child in the center of the changing table and clip together the ends of the restraint belt.

- 4 After use, throw the liner into the trash and close the table.

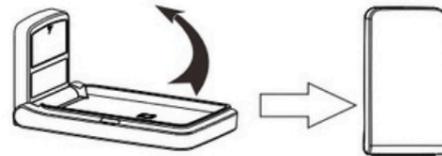


Cleaning and Maintenance

Clean the shell with natural detergent when it is dirty. The acid and alkaline bathroom detergent and benzene, lacquer thinner, abrasive etc are forbidden. Besides, do not use nylon brush such friction tool clean it avoiding be scratched;

When cleaning the shell prevent the water droplets into the baby changing station

Terms of guarantee

1. The product warranty period is one year.
2. The service within warranty period for products, which came into effect from the date of buying the machine.
3. Within one year after purchasing, consumers find the machine failure caused by the product itself reason, then they can go to the purchasing place to maintenance and replace the machine for free with original invoices and completed and quality assurance card stamped by dealers.
4. The following are not in the scope of free maintenance:
 - improper use and the fault caused by demolition, alteration and repair by technical persons without our company authorization.
 - fires, earthquakes, thunder and other natural disasters cause the faults.
 - artificial damage or not in accordance with the instructions operation causes the faults.
 - not quality assurance card or the cards is flit not explicitly or correctly.
5. Over warranty period or it is not free maintained products, while our company remains committed serving.

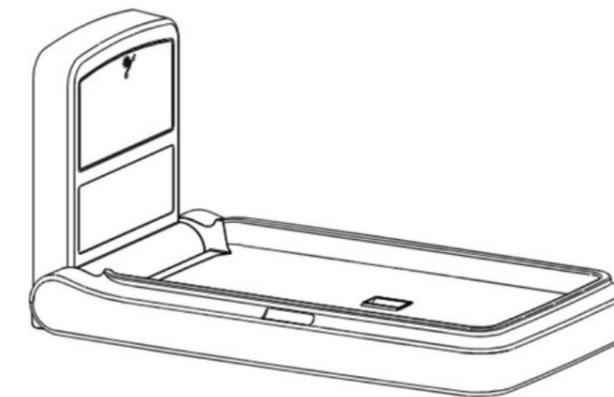

DBCS0003 BABY CHANGING STATION

Operation instruction

Dear Customer:

Thanks for your purchase of our products. Please read this instruction before installation and keep it for installation and usage or any other further reference.

Warning


1. Do not stay away from baby, never leave child unattended.
2. Take care of the baby, avoid serious injury from falling or sliding out.
3. Always use restraint belt when using.
4. Children forbidden hanging on the unit, there are risk of falling.
5. The total maximum recommended weight for this changing station is <25 kg and babies up to 12 months acc. to EN 12221-1:2008+A1:2013 Type 1. The changing station has been tested with a load of 50 kg during 1 hour according to the point 5.7 of the EN 12221-2:2008+A1:2013 Standard. Excessive weight may create dangerous or unstable situations for the baby.
6. Designed for baby care, it is strictly forbidden to use as a infant bed.




Products Features

1. Easy to use and hygiene
The unit manufactured by the antibacterial hdpe, helps reduce the risk of cross-contamination. A disposable liner or blanket can be set between the child and the changing table.
2. Easy to open and close , space-saving
Foldable design provides space optimization, closing the table when not in use.
3. Built in paper holder
The unit is built-in paper holder to provide the disposable liners
4. Safety use
With adjustable restraint belt to better protect baby and keep safety.
5. Product use
The unit can be used in hospitals, restaurants, hotel ,shopping centers & malls , Station& airports ,family and some public places.

Parts and hardware

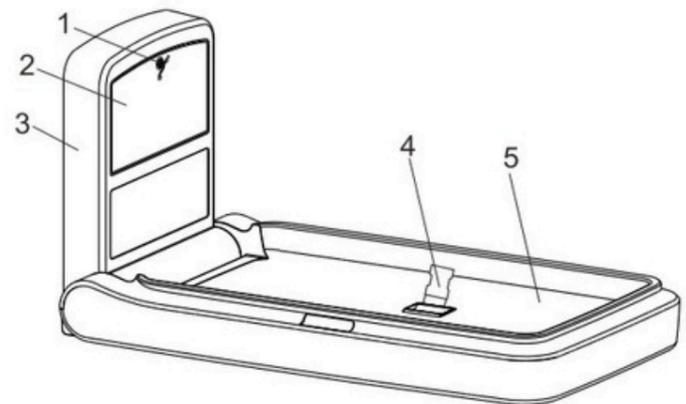

1. Lock
2. Cover plate
3. Backplane
4. Restraint belt
5. Table
6. Screws

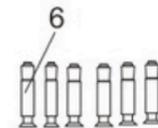

Statement that all assembly fittings shall always be correctly tightened and regularly.

Method of installation

